

# 华秦游乐, 让生活更快乐





# 广州市华秦游乐设备有限公司 Guangzhou Huaqin Playground Equipment Co.,LTD.

地址:广州市番禺市沙头街汀根村大板工业区1街22号8号厂房2-5楼

Add:Floor 2-5, 8th building No.22 first street Daban industrial zone Shatou

street Panyu district, Guangzhou

电话(Tel): 020-87365415 全国免费热线:400-000-3909

传真(Fax): 020-23885188

网址 (web): www.cnhuagin.com





移动端网站

# 太子摩托说明书

Prince Moto manual



Please auspicious read this instruction manual before installation and use, after reading, please keep for later use. 敬请在安装和使用前详阅此说明书,阅后请妥善保存,以备后用

广州市华秦游乐设备有限公司

Guangzhou Huagin Playground Equipment Co., LTD.

R	广州市华秦游乐设备有限公司 Guangzhou Huaqin Playground Equipment Co.,LTD.
故障排除/Failure recov	
故障描述/Problems	解决方法/Solutions

故障描述/Problems	解决方法/Solutions
1.机台不通电 Machine no electricity	1. 检查电瓶上面的保险管是否烧断, 是,更换保险管Please check if the fuse on Battery burned out or not,if yes,change the fuse 2. 检查总电源开关导线有无松脱,或开关损坏。 Check the cable of power switch is loose or not, or check if the power switch is good or not
2. 显示屏花屏 The LCD screen showed blurred screen	1. 检查显示屏线有无松出。 Check if the cable of the LCD screen is loose or not 2. 更换显示屏。Change the lcd screen
3. 充不进电 Battery fails to charge	1. 检查充电接口背面的焊接头有无脱落。 有,用电烙铁焊接牢固。 Check the backside connector of the charger plug plumbed well or not,if loose,plumbed firmly 2. 检查充电接口至电瓶输出的连接的保险管, 有无烧断,有,更换保险管。" Check the fuse between the charger plug and battery input burned out or not,if yes,change the fuse
4. 不启动机台 Machine can not start	1. 按遥控的数字与机台指拨开关的拨号是否相同, 参见遥控的指拨开关说明进行审核。 Check if the NO of remote control is the same as the machine dip switch, please refer to the remote control dip switch instruction to comfirmis the same as the machine dip switch, please refer to the remote control dip switch instruction to comfirm 2. 更换学习模块或重新设置。" Change the learning module and reset it
5. 启动机台后加油门 机台不走 Start the machine and speed up but the machine not moving	1. 检查刹车把手有无损坏油门控制线连接口有无松出。 Check if the brake is damaged or not,or check the speed up control line connector loose or not









### 1、蓄电池的电量显示/Battery power state display

蓄电池电量显示100%时表示蓄电池电量已满,当蓄电池电量显示

7%时,机台要及时的充电。否则会蓄电池亏电,造成蓄电池损坏。 When the battery is 100% full grid display indicates the power is full,when battery display 7%,please charge the machine immediately.Otherwise it will cause the battery power off,eventually result to the battery damage

游戏时间: **0**秒 本机台号: 1号 当前速度: 慢 电量状态: 7% 15**月** 

### 2、蓄电池充电/How to charge the battery



把充电器一端的圆孔插头插到机台后面左边的端口上,并拧紧,如图示。 注意:一定要先插充电器充电端口,另一端插到220V电源。充电源电源灯显示 为红色为正常充电,如显示绿色是无充电或充满

Please Plug the charger circular plug into the left round port on the back of machine and tighten, as picture Notes: Please make sure plug the charge port first, and then connect another side with 220V power supply, When the charge power light indicating red light means normal charging. If the indicator shows Green color, means fully charging or no charging

### 3、蓄电池更换/How to replace the battery



如果需要更换电池,请选择容量匹配、规格相同的蓄电池。先把 电源关掉后更换!

If you want to replace the bettery, please select the same capactive and same size battery, please turn off the power before chang it.

### 温馨提示:

蓄电池最佳使用环境温度25~38度,温度越低则电池电能使用效率越低,当环境温度每下降1度,则电池使用效率随之下降1%。

#### WARM REMINDER:

best battery usage temperature is 25~38 degree.lower temperature will cause lower power usage efficiency. when the temperature lower down 1 degree, the power efficiency will be lowered down 1~%.

# 公司简介/Company profile

广州市华秦游乐设备有限公司创建于2003年,座落在世界最大的游艺设备、游乐设施生产基地——广州番禺,是一家集研发、生产、制造、销售服务于一体的游乐设备公司,多年来专业生产各类室内、户外游乐设施,历经10载的锐意拼搏,在游乐业迅速崛起已初具规模,产品含盖室内外大型机动类、摇摆类、旋转马类、电动类、儿童碰碰车、乐吧车-乐逍摇等系列。30多项自主设计专利,在同行业中遥遥领先。这一切无不倾着我们每个华秦人的心血。

公司自创建以来,不断引进国内外一流的设备与工艺技术,通过导入国际先进的管理理念和标准规范的认证体系,通过了ISO2000质量体系认证,CE, UL认证。 "专业、专注、持续创新"是公司多年来的核心竞争力,在科技高度发达的今天,公司始终以"健康、安全"发展为第一要素,华秦乐吧车等产品销往全国各地并远销欧美、东南亚等50多个国家和地区。公司通过加大技术创新,产品创新和人才培养的投入力度,致力打造创新型企业的良好形象,争创国际一流品牌和行业共享美好明天。

Huaqin Playground Equipment Co.,Ltd. was founded in 2003, is located in the world's largest amusement, recreation production base -- Guangzhou Panyu, is a collection research and development, production, manufacturing, sales and service in one of the recreation equipment company, for many years specializing in the production of all kinds of indoor and outdoor recreational facilities, after 10 years of hard struggle, forge, the rapid rise in tourism has begun to take shape, the product covers both inside and outside the class room large motor, swing class, horse type, electric type, bumper cars and other six series. More than 30 independent design patents, be way ahead in the same industry. All without leaning we each Hua Qin people's effort.

Since the inception of the company, and constantly introducing domestic and foreign first-class equipment and technology, through the introduction of the international advanced management concepts and standards system certification, through the ISO2000 quality system certification, CE certification, UL. "Professional, dedicated, continuous innovation" is the core competitiveness of the company for many years, in the highly developed science and technology today, the company has always been to "health, safety" development is the first factor, Hua Qin products are sold throughout the country and exported to Europe and the United States, Southeast Asia more than 50 countries and regions. The company through increased technological innovation, product innovation and personnel training efforts, efforts to create a good image of innovative enterprises, striving for the international first-class brand and industry share beautiful tomorrow.


全国免费热线 400-000-3909 Free Hotline



# 目录Content

一 .公 司 简 介 Company introduction	1
二 .产 品 分 解 Product details	3
三 .规 格 参 数 Parameters	4
四 .使 用 说 明 Operation instruction	5
五.遥控说明Remote control instructions	6
六.蓄电池的使用 Battery usage	8
七.故障排除 Failure recovery	9

# 后台设置/Background settings

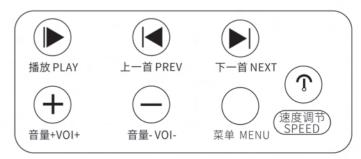

按住NEXT键5秒不放,然后开启电源总开关,进入后台设置介面。按VOL+、VOL-键选择项目,按NEXT键确定,按PREV返回 (Please press PREV button for 5 seconds and then turn on the power switch to enter into the background setting interface, Press VOL+, VOL- to select the project, press NEXT for comfirmation, press PREV to back)

1.币值(Coin value): 可调1-99币玩一次。 此功能为安装投币功能使用。

(You can adjust 1-99 coins to play one time, But this function need install coin acceptor)

2.时间(Time): 可调1-99分钟玩一次(1-99 mins can be adjustable for one time)

3. 查账(Check account): 账目查询(Checking account)

4.打码(Captcha human bypass): 合作机台打码专用项(Cooperation machine has this special function)

5.演示(Demonstration): 未开通(Not open yet) 6.配卡(Matching card): 未开通(Not open yet)

#### ▲ 为防止意外发生 In order to avoid accidents happening.

#### •使用时必须坐稳并抓紧方向盘。

Must grasp the steering wheel when using.

禁止撞向人体。

Forbide hitting human body.

只能在平整地面上行驶。

Only can run on the flat ground.

•使用时远离陡坡、水源、沟槽。

When using away from steep slope, water, grooved.

驾驶车辆时,必须由成人或家长看护和指导,且看护人不得离开,并确保您的孩子一直在您的视野范围之内。

When driving, must be with adults or parents care and

guidance, and guardians shall not be allowed to leave, and

to ensure that your child has been in your field of vision scope.

禁止在非安全地带驾驶本车辆,如道路、车辆附近,台阶上等。

Prohibited driving in the non-safety zone, such as roads,

near the cars and steps etc.

蓄电池质保期180天,使用满1年必须更换。以防其内部结构老化发生意外。 Battery warranty is 180 days, must be replaced after use 1 year usage.

In order to prevent accidents from accident or danger.

严禁超重使用,如超重使用,厂家概不负责。

Forbid overweight using otherwise, the manufacturer win not be responsible for this.





### 4. 音效、歌曲切换 /Audio, songs switching instruction

机台运行时,加油自动起音效且歌曲暂停,松开油门时进入音乐播放,若不想听音效时,可按一下播放键关闭,再按一下,上一曲或下一曲键进即可播放音乐,再按一下播放键则重新返回到播放音效模式。

When the machine is running or accelerating, the audio is playing and music playing stops. When releasing the throttle, the music will start to play. By pressing "Play" to turn off audio.By pressing "Next" or "above" to start playing music .Finally, It will back to play audio mode by pressing "Play" again.

## 遥控说明/Remote control instructions



摇控按1代表控制1号机台,遥控按2表示控制2号机台,如此类推。 如下是主板指拨开关遥控控制机台编号说明.

Press No.1 means control No.1 machine, press No.2 means control No.2 machine.

the rest can be done in the same manner

The following is the mainboard DIP switch remote control of the machine Numbering instructions.

遥控数字	指拨开关/Dip switch			
Remote Control NO.	1	2	3	4
1	OFF	OFF	OFF	ON
2	OFF	OFF	ON	OFF
3	OFF	OFF	ON	ON
4	OFF	ON	OFF	OFF
5	ON	ON	ON	OFF
6	OFF	ON	ON	OFF
7	OFF	ON	ON	ON
8	ON	OFF	OFF	OFF
9	ON	OFF	OFF	ON
10	ON	OFF	ON	ON
11	ON	OFF	ON	OFF
12	ON	ON	OFF	OFF
13	ON	ON	ON	ON
14	ON	ON	OFF	ON
15	OFF	ON	OFF	ON

# 产品分解/Product details



# 颜色展示/Color display



华秦游乐 06

华泰游乐03





## 规格与参数/Specifications and Parameters

 
规格[Size]	1400*500*620mm		
包装规格[Packing size]	1420*620*800mm		
净重[Net weight]	60KG		
最大承重[Max Bearing Weight]	100kg		
刹车配置 [Brake Configuration]	电子刹车 [Electronic brake]		
配套电机[Matching Motor]	24V\250W(滚塑)		
配套铅酸电池[Matching Lead Acid battery]	12V-20A\2PCS		
续航时间[Waking time]	6-7小时[Hours]		
配套彩灯[Matching colorful Light]	蓝灯、七彩灯、射灯 [Blue Light,7 colors flash light,spot light]		
配套充电器[Matching Charger]	24V-4A\1PCS		
配套控制器[Matching controller]	智能控制器[Intelligent Controller]		
启动方式[Start mode]	无线遥控[Wireless Remote control]		
电压显示[Voltage display]	标准配置电池电压显示 [Standard battery voltage display]		
外壳材料[Shell material]	滚塑[Rotational molding]		
颜色[Color]	黑色\蓝色\紫色\红色\白色 (Black/ Blue/ Purple/ Red/ <u>While</u> )		
速度设置[Speed setting]: 高速[High] 6.5km/h 中速[Medium]:5km/h			
(氏) 市[1 aw] 2 Flow /h			

低速[Low] 3.5km/h

# 操作说明/Operation Instructions:

### A.打开电源开关, 遥控器遥控启动开始游玩

Turn on the power switch, remote control to start playing



电源开关 power switch

### B.左手柄为刹车,右手柄鸣笛:拧转右手柄启动摩托,机台前行

The left handle is a brake, right handle is for honking Turn the right handle to start the motor, the machine move forward

0秒 游戏时间: 本机台号: 1号 当前速度: 慢

电量状态: 100% 15月

按红色开关可选择不同的速度 Respectively High speed.

medium speed. low speed are available

1.游戏时间:显示面板显示剩余游玩时间。

2.本机台号:按遥控数字键与机台编号相同后机台启动,

3. 当前音量:可用按键板VOL+或VOL-调节喇叭音量。

- 1.Game time:Please press remote control No. the same as machine No. to start the machine.the LCD Screen display remaining play time
- 2. Surplus coins: This function can be used when install coin acceptor
- 3. Current Volume: You can press VOL+, VOL- to adjust the speaker volume
- 4. Power status: Please charge it in time when machine display 40% battery

### 3. 待机/standby instruction

打开机台电源总开关,进入待机状态,此时机台灯光全亮(可通过遥控15号键,进行开/关切换),同时自动播 放音乐(可通过操作按键板播放键进行唱/停切换,也可操作音量+/-键来调节音量大小)。

After turning on power switch of the machine, it is in the standby MODE. All lights are on (It can be controlled and switched by pressing No.15 on the remote controller), meanwhile, music is playing automatically.(by operating "Play" or "stop" button on button-pressing board to control Sing/Pause switching, volume controlled by volume+/volume -).